

7247/6040 Microcode(PowerPC ThinkPad 820)

7247/6040 microcode description

New level description

This release of microcode for the 7247/6040 Series of ThinkPad Power Series is version 1.01.

Year 2000 Support

All models of the 7247/6040 must be updated to be Year 2000 ready*.

You will want to update your microcode to version 1.01 to ensure that your system is Year 2000 ready*. This update provides other functional enhancements. See the next section.

* Please consult the IBM Year 2000 web page at <http://www.ibm.com/IBM/year2000> for IBM's definition of "Year 2000 ready" and the latest information of the status of IBM products and the Year 2000.

Enhanced Function

Version 1.01 contains all of the features of the previous release, 1.0, plus the following enhancements and fixes:

1. ROM code updates RTC Date registers improperly.
2. PCIC registers are not initialized on warm boot.
3. Flash ROM write-protect is not enabled when OS boot.
4. NT Shutdown & restart causes ROM hang.
5. ROM code updates RTC Date registers intermittently.
6. Windows NT ARC reports an internal error.

You will want to update your microcode if you would like to add these enhancements to your system. Users are encouraged to upgrade to this version.

Previous level description

FW VERSION : 1.00 ROM BUILD DATE : 07/03/95

How to determine your microcode version

To check your microcode version:

1. Enter Easy Setup by pressing the F1 key at the power on time.
2. Select Test icon.
3. Enter Super Test by pressing the Ctrl + A keys.
4. Enter Maintenance Utility by pressing the Ctrl + V keys.
5. Select System Info.
6. System ROM version number shows the current firmware level. ** If System ROM version number is 1.01, the machine is already applied this Firmware change. Turn on or shutdown and restart the computer.

How To Upgrade Your System Microcode

To update your system microcode, follow the "RS/6000 microcode download procedure" to download and unpack a file archive. Each archive contains a detailed README file with step-by-step instructions on how to update the system microcode.

1. Select the format for the system where you want to unpack the microcode, either:
2. [AIX format] for AIX systems, or
3. [DOS format] for Windows NT or DOS, or
4. [RPM format] for Linux or AIX (at level 5.1 or higher)
5. After downloading the microcode you will need to transfer the file to your system. Then follow the [Description] file to unpack and install the microcode.
6. In addition, **for some microcode you will be required to enter the following eleven-character, case-sensitive password to unpack the file: **RS/6000****. Note: The **'s are part of the eleven characters.